



KH 2246



Radio

Instructions for use

Kompernaß GmbH
Burgstrasse 21
D-44867 Bochum
Deutschland/Germany
—
www.kompernass.com

KH 2246	v.1.1
UK	08-2006

Index

1. Safety instructions	4
2. Scope of delivery	6
3. Usage	6
4. Technical data	6
5. Operating controls.....	7
6. Preparing the radio for use.....	8
7. Radio operation	11
8. Turning the radio off	12
9. Additional radio functions.....	12
10. Cleaning the radio	16
11. Troubleshooting	16
12. Disposing of the radio	18

1. Safety instructions

Danger!

Do not place or hang the radio ...

- *in areas exposed to direct sunlight! Otherwise the radio could overheat and be damaged beyond repair. This could cause a fire!*
- *in the immediate vicinity of heat sources such as ovens, heaters and similar devices or vent openings of other electrical devices! Otherwise the radio could be damaged beyond repair. This could cause a fire!*

Warning!

The radio contains no user-serviceable parts. The warranty is void if the casing of the radio is opened!

For repairs, please contact our service partner nearest you. You will find the addresses of our service partners on the warranty card. The warranty card is included in delivery of the radio.



Note:

No liability will be taken and no guarantee will be made for damages ...

- *due to opening the case of the radio*
- *resulting from repair attempts not made by qualified experts*
- *use of the radio for purposes other than intended.*



Note:

Battery acid could leak out, especially if the batteries are old. Therefore you should remove all batteries if you do not plan to use the radio for long periods of time. This protects the radio from battery acid leakage.

2. Scope of delivery

- ✓ Radio
- ✓ Stand
- ✓ Suction cup for wall mounting
- ✓ These instructions for use
- ✓ Warranty card

3. Usage

The radio is exclusively intended ...


- as an entertainment device
- as a receiver for frequency modulation (FM) radio stations
- for private non-commercial use.

4. Technical data

Direct Current (DC): 3 V (2 × AAA/Micro batteries)
FM frequency range: 87.5–108 MHz

5. Operating controls

- 1 Eyelet to hang on suction hook
- 2 On/Off switch
- 3 Volume+ button
- 4 Volume- button
- 5 Loudspeaker
- 6 Set buttons
- 7 Stand
- 8 Mode buttons
- 9 Battery compartment
(on the back of the radio)
- 10 Display
- 11 Scan button
- 12 Reset button

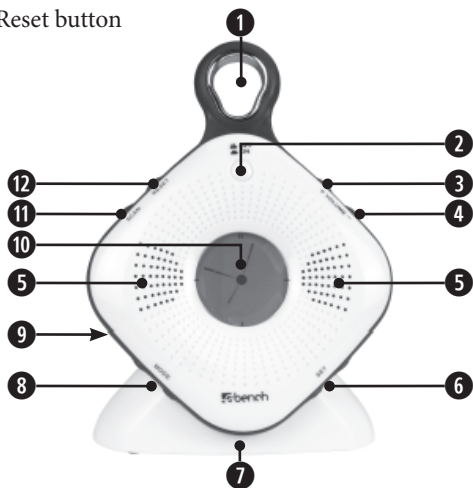

6. Preparing the radio for use

Carefully remove the radio from the packaging. Do not drop the radio! Otherwise it could be damaged beyond repair.

6.1. Inserting the batteries

- 1 If the radio is turned on: Press the on/off switch once.
- 2 Take the cover off the battery compartment on the back of the radio. To do this pull the cover down.
- 3 Open the battery compartment.
- 4 Place two AAA/LR03/Micro batteries in the battery compartment. Please insert the batteries in the battery compartment as shown in the picture.
- 5 Close the battery compartment again.
- 6 Slide the cover to its original position. You should hear a click when the cover is moved into the proper position. Now the radio is ready for operation.



Note:

The batteries should be replaced if ...

- ➔ *playback volume decreases without having adjusted the volume control knob*
- ➔ *the sound is distorted during playback or*
- ➔ *radio reception is interrupted abruptly.*

The button battery has to be replaced if the display becomes weak or disappears completely.

In order to obtain maximum performance from the radio: always replace both batteries.

6.2. Positioning or hanging the radio

You can either stand the radio or hang it.

To place the radio in standing position using the stand included in delivery:

Place the radio in the stand included in delivery. Only place the radio on a level, scratchproof, non-slip surface.

To hang the radio using the suction hook included in delivery:

- 1 Press the suction hook onto a smooth, clean, non-oily surface. Suitable surfaces include tiled walls or mirrors.

! Warning!

Please make sure that the selected surface is smooth, clean and free from oil. Otherwise the suction hook could lose traction and the radio could fall down. This could cause the radio to be damaged beyond repair!

- 2 Subsequently hang the radio on the suction hook using the eyelet.

If you want to remove the suction hook again: Carefully pull the suction hook from the surface.

⚡ Danger!

Do not place or hang the radio ...

- ➔ *in areas exposed to direct sunlight! Otherwise the radio could overheat and be damaged beyond repair. This could cause a fire!*

- *in the immediate vicinity of heat sources such as ovens, heaters and similar devices or vent openings of other electrical devices! Otherwise the radio could be damaged beyond repair. This could cause a fire!*

! Warning!

Do not place or hang the radio in areas exposed to extreme physical shock or constant vibrations. Physical shock and constant vibrations could lead to malfunctions and long-term damage.

7. Radio operation

7.1. Receiving radio stations

To receive a radio station:

- 1** Turn on the radio by pressing the on/off switch.
- 2** Press the scan button to scan for the next available radio station. Each time you press the scan button, the radio will scan for the next available station. To return to the first received radio station: Press the Reset button once.
- 3** Adjust the volume by pressing the buttons Volume+ or Volume-.

7.2. Improving radio station reception

The radio has an integrated antenna for radio reception. Simply turn the radio until reception of the radio station has improved.

8. Turning the radio off

Press the on/off switch once to turn off the radio.

9. Additional radio functions

9.1. Setting the time

To set the time:

- 1 Press one of the Mode buttons three times.



Note:

If you do not start setting the time within five seconds, then the display format will return to normal time mode.

- 2 Set the time by repeatedly pressing one of the Set buttons or by pressing and holding one of the Set buttons. The second display will remain at 12 o'clock. The minute hand rotates and automatically pulls the hour hand with it.



Note:

Please note that PM is displayed on the left side for hours from 12 p.m. to 11:59 p.m. This is important if you want to use the alarm function. In this case, the time formats have to match.

- 3 Release the Set button as soon as the desired time is displayed on the screen. The time is set and will appear on the display screen.

9.2. Using the alarm function

The alarm function is used to play an alarm sound at a preprogrammed time. This function could be used as an alarm clock for example.

9.2.1. Setting the alarm time

- 1 Press one of the Mode buttons twice. The selected alarm time appears and AL blinks on the display screen.



Note:

If you do not start setting the alarm time within five seconds, then the display format will return to normal time mode.

- 2 Set the desired alarm time by repeatedly pressing one of the Set buttons or by pressing and holding one of the Set buttons.
- 3 Release the Set button as soon as the desired alarm time is displayed on the screen. After 5 seconds, the display format will return to the normal time mode. The alarm time is now set.

9.2.2. Turning on the alarm function

- 1 Press one of the Mode buttons once. The set alarm time and AL appear on the display screen.

**Note:**

If you do not press another button within 5 seconds, then the display format will return to the normal time mode.

- 2 To activate the alarm function, press one of the Set buttons once. The bell symbol and Zz appear on the display screen. The alarm function is now activated. The alarm sound will be played at the preprogrammed time.
- 3 To turn off the alarm sound: Press one of the Mode buttons and then one of the Set buttons. The bell symbol and Zz will disappear from the display screen.



9.3. Using the snooze function

You can use the snooze function to interrupt the alarm sound for five minutes.

- 1 When the alarm sound is played at the preprogrammed time, press one of the Set buttons once. The alarm sound is interrupted and Zz appears on the display screen. The bell symbol remains on the display screen.
- 2 The alarm sound will be played again in 5 minutes.
- 3 To turn off the alarm sound: Press one of the Mode buttons and then one of the Set buttons. The bell symbol and Zz will disappear from the display screen.

9.4. Switching to a different display mode

Press one of the Mode buttons once: The selected alarm time will be displayed. If the alarm function is set: The bell symbol and Zz will appear on the display screen.

Note:

If you do not press the Set button again within two seconds, then the normal time will be displayed again.



10. Cleaning the radio

Clean the radio casing only using a slightly damp cloth. To remove persistent dirt, add a few drops of mild dishwashing liquid to the damp cloth. When cleaning the device, make sure that no moisture seeps into the radio!

11. Troubleshooting

11.1. The radio is not functioning at all

- A** Make sure the batteries have been inserted in the battery compartment according to the picture.
- B** The batteries may be old. If this is the case, replace the batteries.

11.2. No reception or poor reception quality

Press the scan button to scan for a radio station with better reception.

11.3. No sound

Press the Volume+ button to increase the volume.

11.4. Other malfunctions

Please contact your nearest service partner if ...

- the malfunctions described in sections 11.1. to 11.3. can not be rectified as described or
- other malfunctions occur upon operating the radio.

You will find the addresses of our service partners on the warranty card delivered with the radio.

Warning!

The radio contains no user-serviceable parts. The warranty is void if the casing of the radio is opened!

Note:

No liability will be taken and no guarantee will be made for damages ...

- *due to opening the case of the radio*
- *resulting from repair attempts not made by qualified experts*
- *use of the radio for purposes other than intended!*

12. Disposing of the radio



Do not dispose of the radio in the household waste!

Please contact those responsible for waste management in your city or community and ask how to properly dispose of electronic devices.



Note:

You should remove all batteries before disposing of the radio. Do not dispose of the batteries in the household waste! Return the used batteries to an appropriate recycling collection center. Used batteries can usually be returned to the store in which they were bought.

